

Panasonic

Operating Instructions



Digital Cordless Phone

Model No. **KX-TCD560NZ**

Digital Cordless Answering System

Model No. **KX-TCD580NZ**



This unit is Caller ID compatible. To display the caller's phone number, you must subscribe to Caller ID service.

Charge the battery for about 5.5 hours before initial use.

Please read these operating instructions before using the unit and save them for future reference.

Table of Contents

Preparation

Accessory information	3
Important information	5
Controls and displays	6
Connections	9
Battery installation	9
Battery charge	9
Battery replacement	10
Turning the power on/off	11
Setting the date and time	11

Telephone

Making calls	12
Answering calls	14
Handset phonebook	15
Base unit phonebook (KX-TCD580 only)	19

Useful Telephone Settings

Guide to handset settings	22
Handset settings	23
Guide to base unit settings	28
Base unit settings	29

Optional Telephone

Services

Caller ID service	32
-----------------------------	----

Answering System Features (KX-TCD580 only)

Answering system	35
Turning the answering system on/off	35
Greeting message	35
Listening to messages	36
Recording a voice memo	36
Memory capacity	37
Using direct commands	37
Remote operation	38
Guide to answering system settings	39

Multi-unit Operation

Operating additional units	41
Registering a handset to a base unit	41
Intercom between handsets	42
Copying handset phonebook entries to	

other handsets	42
Transferring calls between handsets, conference calls	43
Walkie-Talkie	44

Useful Information

Using the belt clip	46
Using an optional headset	46
Wall mounting	47
Character entry	49
Troubleshooting	51
Technical information	54

Index

Index	55
-----------------	----











Accessory information

Thank you for purchasing a new Panasonic digital cordless phone.

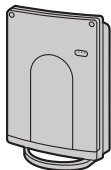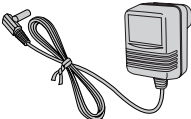Dear purchaser,

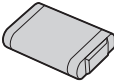You have acquired a product made in compliance with the Digital Enhanced Cordless Telecommunications (DECT) standard. DECT technology is characterized by high-security protection against interceptions as well as high-quality digital transmission. This telephone was designed for a wide range of applications.

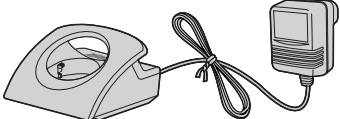Included parts

Base unit 	AC adaptor (for base unit) PQLV19AL  Important: <ul style="list-style-type: none"> ● Use only the included 6 V/500 mA AC adaptor when connecting the base unit. 	Telephone line cord 
Handset 	Battery 	Battery cover 
Belt clip 	Charger unit  Important: <ul style="list-style-type: none"> ● Use only the included 9 V/350 mA AC adaptor when connecting the charger. 	
Operating instructions 	Quick guide 	

Preparation

Additional/replacement accessories

Model No.	Description
N4HHGMB00007 or HHR-P103	Rechargeable nickel metal hydride (Ni-MH) battery
KX-TCA158AZ	Additional handset

General Warning:

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom’s network services.

Important Notice:

Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

Important information

General

- Use only the AC adaptors included with this product, noted on page 3.
- Do not connect the AC adaptors to any AC outlet other than a standard 220–240 V AC outlet.
- This product is unable to make calls when:
 - The portable handset battery needs recharging or has failed.
 - There is a power failure.
 - The key lock feature is turned on.
 - The direct call feature is turned on (only the phone number stored in the unit as the direct call number can be called).
 - The call bar feature is turned on (only phone numbers stored in the unit as emergency numbers can be called).
- Do not open the base unit, charger, or handset (other than to replace the battery).
- This product should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.
- Care should be taken that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this product to excessive smoke, dust, mechanical vibration or shock.

Environment

- Do not use this product near water.
- This product should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.
- The AC adaptors are used as the main disconnect devices. Ensure that the AC outlets are located/installed near the unit and are easily accessible.

Warning:

- To prevent the risk of electrical shock, do not expose this product to rain or any other type of moisture.

Location

- For maximum distance and noise-free operation, place your base unit:
 - Away from electrical appliances such as TVs, radios, personal computers or other phones.
 - In a convenient, high and central location.
- You can increase the range of the base unit by using a DECT repeater. Consult your Panasonic dealer for details. Before registering the repeater to this base unit, you must change the base unit PIN to a number between 9000 and 9999 (page 30), then disconnect the base unit AC adaptor and connect it again.


Battery caution

- We recommend using the battery noted on page 4. **Use only a rechargeable battery.**
- Do not dispose the battery in a fire, as they may explode. Check local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte from the battery is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care when handling the battery. Do not allow conductive materials such as rings, bracelets or keys to touch the battery, otherwise a short circuit may cause the battery and/or the conductive material to overheat and cause burns.
- Charge the battery in accordance with the information provided in these operating instructions.

Controls and displays


Controls

Base unit

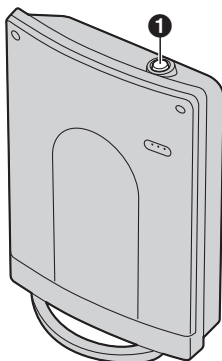


1 [⋈] (Page)

Charger

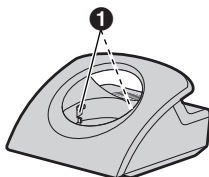

1 Charge contacts


Handset

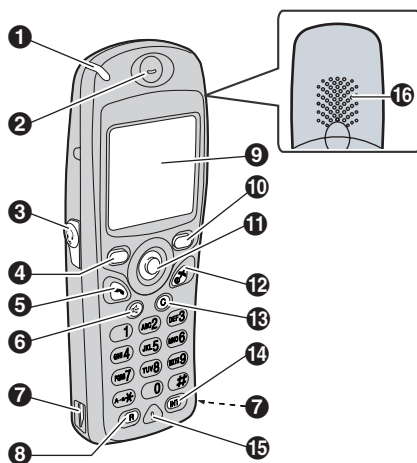


- 1** Ringer indicator/Charge indicator
- 2** Receiver
- 3** Headset socket
- 4** Left soft key
- 5** [↶] (Talk)
- 6** [📢] (Speakerphone)
- 7** Charge contacts
- 8** [R] (Recall)
- 9** Display
- 10** Right soft key
- 11** Joystick
- 12** [🔌] (Off/Power)
- 13** [C] (Clear)
- 14** [INT] (Intercom)
- 15** Microphone
- 16** Speaker

Using the joystick

The handset joystick can be used to navigate through menus and to select items shown on the display, by pushing it up, down, left, or right.

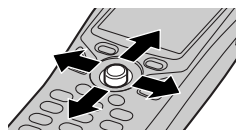

It can also be used to select the centre soft key icon, by pressing down on the centre of the joystick.

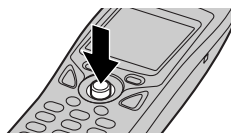

Note:

- Up to 5 menu items can be displayed at a time. To select a menu item not shown on the current page, scroll up or down by pushing the joystick up or down, respectively.

Displays

Display icons

Various icons appear on the handset display to indicate the current status of the unit.

Display icon	Meaning
	Within range of a base unit <ul style="list-style-type: none"> When flashing: No base unit (out of range of base unit, handset is not registered to base unit, no power on base unit)
	Handset is accessing base unit (intercom, paging, changing base unit settings, etc.)
	Handset is on an outside call
	Call bar is on (page 25)
	Missed call (Caller ID subscribers only; page 32)
	Phonebook is being accessed

Display icon	Meaning
	Answering system is on (page 35) and/or new messages have been recorded (page 36) (KX-TCD580 only)
	Battery strength
	Ringer volume is off (page 23)
	Direct call is on (page 25)
H/set 1	Handset number or name (page 24)
	Vibration is on (page 23)
	New voice message (call minder users only; page 33)
IN USE	Line is being used by another unit
	Phonebook entry has a voice tag (page 17)

Menu icons

When in standby mode, pressing the joystick reveals the handset's main menu. From here you can access various features and settings.

Menu icon	Menu/feature
	Caller ID list
	Display options (KX-TCD560 only)
	Ringer options
	Answering system (KX-TCD580 only)
	Handset settings
	Base unit settings
	Walkie-Talkie


Soft keys

The handset features two soft keys and a joystick. By pressing a soft key, or by pressing the centre of the joystick, you can

Preparation

select the feature or operation indicated by the soft key icon shown directly above it.

- Pressing the left or right soft key selects the leftmost or rightmost soft key icon respectively.
- Pressing the centre of the joystick selects the centre soft key icon.
- The icons shown will vary depending on how you are using the unit.

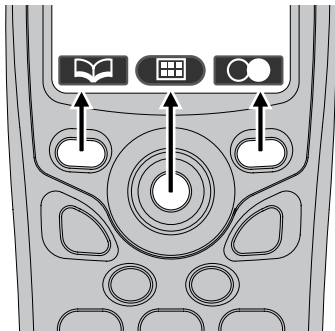


Soft key icons

Soft key icon	Action
	Returns to the previous screen
	Displays the main menu
	Displays the appropriate sub-menu
	Accepts the current selection
	Displays a previously dialled phone number
	Opens a phonebook
	Creates a new phonebook entry
	Displays the phonebook search menu
	Turns the key lock feature off (page 13)
	Switches between AM, PM, and 24-hour time entry


Soft key icon	Action
	Stops recording or playback (KX-TCD580 only)
	Displayed when alphabet character entry is selected. Press to select another entry mode.
	Displayed when numeric character entry is selected. Press to select another entry mode.
	Displayed when Greek character entry is selected. Press to select another entry mode.
	Displayed when extended 1 character entry is selected. Press to select another entry mode.
	Displayed when extended 2 character entry is selected. Press to select another entry mode.
	Displayed when Cyrillic character entry is selected. Press to select another entry mode.
	Places a check mark next to the menu item
	Inserts a dialling pause (page 13)
	Turns the mute feature on/off during a conversation (page 13)
	Erases the selected item
	Turns the ringer off temporarily (page 14)
	Displayed when the soft key has no function

Connections

Base unit

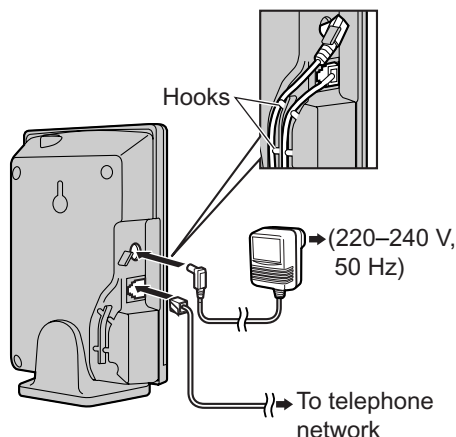

Charger

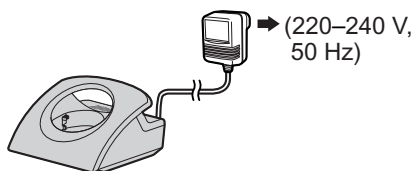

Important:


- Use only the included 6 V/500 mA AC adaptor when connecting the base unit.
- Use only the included 9 V/350 mA AC adaptor when connecting the charger.

Note:


- If the handset is not charged, you cannot make or answer calls.
- Never install telephone wiring during a lightning storm.
- The AC adaptors must remain connected at all times. (It is normal for the adaptors to feel warm during use.)
- This unit is not designed to be used with rotary (pulse dialling) services.

Battery installation

- 1 Insert the battery as shown. Insert the \oplus and \ominus end of the battery first.

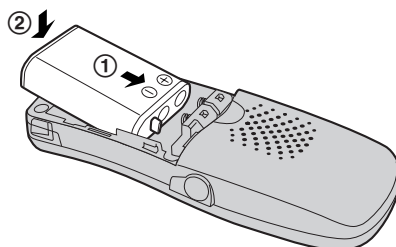

- 2 Close the battery cover.

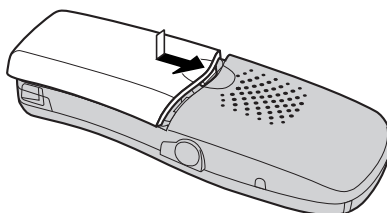


Note:

- Use only a rechargeable battery (page 4).

Battery charge

Place the handset on the charger for about 5.5 hours before initial use.

The charge indicator turns red while the battery is charging, and turns green when the battery is fully charged.

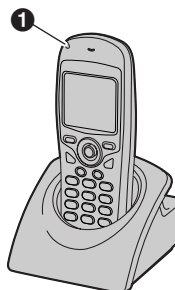

- 1 Charge indicator



 
Preparation

Note:

- Clean the charge contacts (page 6) of the handset and charger with a soft, dry cloth once a month, otherwise the battery may not charge properly. Clean more often if the unit is exposed to grease, dust or high humidity.

Battery strength

When charging, the battery icon is shown as follows.

Battery icons	Battery strength
	High
	Medium
	Low When flashing: Needs to be charged

Note:

- If the handset is turned off, it will be turned on automatically when it is placed on the charger.

Battery life


After your Panasonic battery is fully charged, you can expect the following performance:

Operation	Operating time
While in use (talking)	17 hours max.
While not in use (standby)	270 hours max.

Note:

- Actual battery performance depends on a combination of how often the handset is in use (talking) and how often it is not in use (standby).
- Battery operating time may be shortened over time depending on usage conditions and ambient temperature.


Battery replacement

If  flashes even when the handset battery has been fully charged, the battery must be replaced.

Important:

- Please use only the Panasonic battery noted on page 4.
- Use only a rechargeable battery. If you install a non-rechargeable battery and start charging, the battery may leak electrolyte.

- 1 Press the notch on the cover firmly and slide it in the direction of the arrow.

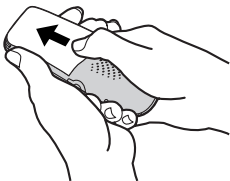

- 2 Remove the old battery and install the new one. See page 9 for battery installation.

Turning the power on/off

Power on

Press **[↶⊙]** for about 1 second.

- The display will change to the standby mode.

Power off

Press **[↶⊙]** for about 2 seconds.

- The display will go blank.

Setting the date and time

Important:

- Confirm that the AC adaptors are connected.
- Ensure that **⚡** is not flashing.

- 1 Press **[⏏]** (centre of joystick).
- 2 Select **[⏏]**, then press **[OK]** 2 times.
- 3 Enter the current day, month and year by selecting 2 digits for each.

Example: 17 May, 2004

Press **[1][7] [0][5] [0][4]**.

- If you make a mistake, use the joystick to move the cursor, then make the correction.

- 4 Enter the current hour and minute by selecting 2 digits for each.
- 5 Press **[12/24]** repeatedly to select 12- or 24-hour time entry.
 - 24-hour time entry is selected when neither **"AM"** nor **"PM"** are displayed.

Example: 3:30 PM

Press **[0][3] [3][0]**, then press **[12/24]** repeatedly until **"03:30 PM"** is displayed.

- 6 Press **[OK]**.
- 7 Press **[↶⊙]**.

Note:

- If a power failure occurs, set the date and time again.

Making calls

- 1 Lift the handset and dial the phone number.
 - To correct a digit, press **[C]**, then enter the correct number.
- 2 Press **[↶]**.
- 3 When finished talking, press **[⏏]** or place the handset on the charger.

Speakerphone

The handset features a digital speakerphone, which allows you to have hands-free conversations. Press **[📞]** to turn on the speakerphone during a conversation. Press **[↶]** to switch back to the receiver.

- “**Speaker Phone**” is displayed while the speakerphone is turned on.
- For best performance, please note the following:
 - Use the speakerphone in a quiet environment.
 - Speak alternately with the caller.
 - If you or the other party have difficulty hearing each other, push the joystick up or down repeatedly to adjust the speaker volume as necessary.

To adjust the receiver or speaker volume

Push the joystick up or down while talking. 3 volume levels are available for the receiver. 6 levels are available for the speaker.

Redial feature

Previously dialled phone numbers (each 24 digits max.) can be redialled.

To redial the last number dialled

Press **[📞]** (soft key), then press **[↶]** or **[📞]**.

To redial automatically

Redial by pressing **[📞]** then **[📞]** (soft key) if you want the unit to redial the phone number again automatically if the other party's line is engaged. The unit will redial up to 10 times. While the handset is waiting to redial, the ringer indicator will flash. While the handset is redialling, mute is automatically turned on.

Note:

- If mute does not turn off after the line is connected, press **[📞]**.

To make a call using the redial list







The last 10 phone numbers dialled are stored in the redial list.

- 1 Press **[📞]** (soft key).
 - The last number dialled will be displayed.
- 2 Push the joystick up or down repeatedly to select the desired number.
 - To exit the list, press **[⏏]**.
- 3 Press **[↶]** or **[📞]**.








To edit a number in the redial list before calling it

- 1 Press **[📞]** (soft key).
- 2 Push the joystick up or down repeatedly to select the desired number, then press **[📞]**.
- 3 Select “**Edit for Call**”, then press **[OK]**.
 - The first digit of the number will flash.
- 4 Use the joystick to move the cursor, then edit the number.
 - Place the cursor on the number you wish to erase, then press **[C]**.
 - Place the cursor to the right of where you want to insert a number, then press the appropriate dial key.
- 5 Press **[↶]**, **[📞]**, or **[OK]** to call.

To erase numbers in the redial list



- 1 Press  (soft key).
- 2 Push the joystick up or down repeatedly to select the desired number, then press .
- 3 Select "Delete", then press .
 - If you want to erase all numbers in the list, select "Delete All", then press .
- 4 Select "Yes", then press .
- 5 Press .

To store a number from the redial list into the handset phonebook

- 1 Press  (soft key).
- 2 Push the joystick up or down repeatedly to select the desired number, then press .
- 3 Select "Save Phonebook", then press .
- 4 Enter a name (16 characters max.; see page 49 for character entry), then press .
- 5 Edit the phone number if necessary, then press .
- 6 Select the desired category (page 32), then press  2 times.
- 7 Press .


Other features


Mute


You can mute your voice during a conversation. While mute is turned on you will be able to hear the other party, but the other party will not be able to hear you. To mute your voice, press  (soft key). To return to the conversation, press  again.

Key lock

The handset can be locked so that no calls or settings can be made. Incoming calls can be answered, but all other functions are disabled while key lock is on.

To turn key lock on, press  (centre of joystick) for about 2 seconds.

-  will be displayed.

To turn key lock off, press  for about 2 seconds.

Note:

- Emergency calls (page 29) cannot be made until key lock is turned off.
- Key lock is turned off when the handset is turned off.

R button (to use the recall feature)

[R] is used to access optional telephone services. Contact your service provider for details.

If your unit is connected to a PBX (private branch exchange), pressing **[R]** can allow you to access certain features of your host PBX such as transferring an extension call.


Call waiting

Call waiting is a service offered by your service provider whereby a second caller can be answered while online with the first caller. To answer the second caller, press **[R]**. To return to the first caller, press **[R]** again. Please consult your service provider for details of this service.

Pause button (for PBX/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service.

Example: If you have to dial **[0]** before dialling outside numbers manually, you will probably pause after dialling **[0]** until you hear a dial tone.

- 1 Press **[0]**.
- 2 Press  (soft key).

Telephone

- 3** Dial the phone number, then press **[↶]** or **[↷]**.

Note:

- Pressing **[P]** 1 time creates 1 pause. Press **[P]** repeatedly to create longer pauses. To change pause length, see page 29.

Recording a telephone conversation (KX-TCD580 only)

You can record your conversation while on an outside call.

Important:

- Before recording a conversation, you should inform the other party that the conversation will be recorded.
- Press **[M]** (centre of joystick) during a conversation.
 - Press **[OK]**.
 - A beep is heard and recording starts.
 - A beep sounds every 15 seconds and can be heard by the other party, but is not recorded.
 - To stop recording, press **[P]**.

Note:

- All persons using this device for recording telephone conversations shall comply with New Zealand law. This requires that at least one party to the conversation is to be aware that it is being recorded. In addition, the principles enumerated in the Privacy Act 1993 shall be complied with in respect to the nature of the personal information collected, the purpose for its collection, how it is used and what is disclosed to any other party.
- Recorded conversations are treated as new messages.
- To listen to the recorded conversation, see page 36.
- If message memory becomes full, “Full” is displayed and recording stops. Erase unnecessary messages (page 36).

Answering calls

- Lift the handset and press **[↶]** or **[↷]** when the unit rings.
 - You can also answer a call by pressing any dial key from **[0]** to **[9]**, **[*]**, **[#]**, or **[INT]**. (Any key talk feature)
- When finished talking, press **[↶]** or place the handset on the charger.

Vibration feature

When this feature is turned on (page 23), the handset will vibrate to indicate an incoming call.

Auto talk feature

You can answer calls simply by lifting the handset off the charger. You do not need to press **[↶]**. To turn this feature on, see page 26.

To turn the handset ringer off temporarily

When an outside call comes in, press **[M]** or **[↶]**.

Note:

- This feature will not work for intercom calls or when the handset is on the charger.

Handset locator





Using this feature, you can locate the handset if it has been misplaced.

- Press **[M]** on the top of the base unit.
 - The base unit will page the handset for about 1 minute.
 - If the vibration feature is turned on (page 23), the handset will vibrate to indicate an incoming page.
- To stop paging, press **[M]** on the base unit or press **[↶]** on the handset.

Handset phonebook

The handset phonebook allows you to make calls without having to dial manually. You can add 200 names and phone numbers to the handset phonebook and search for phonebook entries by name, category, or by performing a voice search.

Adding entries to the handset phonebook

- 1 **KX-TCD560:**
Press  (soft key), then press .
KX-TCD580:
Press  (soft key), , then press **OK**.
 - The display shows the number of available entries in the phonebook.
- 2 Enter the party's name (16 characters max.; see page 49 for character entry), then press **OK**.
- 3 Enter the party's phone number (24 digits max.), then press **OK**.
- 4 Select a category for the entry, or select "Off".
 - You can search for handset phonebook entries by category (page 16).
 - You can change the category names (page 25).
 - Caller ID subscribers can use additional private category features (page 32).
- 5 To save the entry, press **OK** 2 times.
- 6 Press **[X0]**.

Note:

- If there is no space to store new entries, "Memory Full" will be displayed. Erase unnecessary entries (page 18).

To edit/correct a mistake

Use the joystick to place the cursor on the number or character you wish to erase, then press **[C]**. Place the cursor to the right of where you want to insert a number or character, then press the appropriate dial key.


Note:

- Press and hold **[C]** to erase all numbers or characters.

Finding and calling a handset phonebook entry


Handset phonebook entries can be searched for alphabetically, by first character, by category, by voice tag, or by scrolling through all phonebook entries. Once you have found the desired entry, press **[<]** or **[>]** to dial the phone number.

Scrolling through all entries

- 1 Press  (soft key).
- 2 Push the joystick up or down repeatedly to display the desired entry.



Searching alphabetically

This method is useful when you are searching for an entry which starts with a letter of the alphabet.



- 1 Press  (soft key).
- 2 Press the dial key (**[0]** to **[9]**) which corresponds to the letter you are searching for (page 49).
 - Press the same dial key repeatedly to display the first entry corresponding to each letter located on that dial key.
 - If there is no entry corresponding to the letter you selected, the next entry will be displayed.
- 3 Push the joystick up or down repeatedly to scroll through the phonebook if necessary.

Searching by first character (index search)

This method is useful when you are searching for an entry which does not start with a letter in the alphabet.


- 1 Press  (soft key), , then press **OK**.
- 2 Press the right soft key repeatedly to select the character entry mode that contains the character you are searching for.
- 3 Press the dial key ([0] to [9]) which contains the character you are searching for.
 - Press the same dial key repeatedly to select the character you are searching for.
- 4 Press **OK**.
 - The first entry beginning with the character you selected is displayed. If there is no such entry, the next entry will be displayed.
- 5 Push the joystick up or down repeatedly to scroll through the phonebook if necessary.

Searching by category

- 1 Press  (soft key), then press .
- 2 Select **“Category”**, then press **OK**.
- 3 Select the category you want to search, then press **OK**.
 - The first entry in that category is displayed.
 - If **“Memory Empty”** is displayed, the category you selected has no entries.
- 4 Push the joystick up or down repeatedly to scroll through the phonebook if necessary.

Searching by voice (voice search feature)



Before using this feature you must add voice tags to phonebook entries you want to search for by voice (page 17).

- 1 Press and hold  (soft key).
- 2 When **“Speak Now”** is displayed, say the name of the phonebook entry.
 - If key tones are turned on (page 24), speak after the beep.
 - Hold the handset about 20 cm away and speak clearly into the microphone.

Note:

- The voice search feature performs best when used by the same person who recorded the voice tag.
- When the auto voice dial feature is turned on (page 26), handset phonebook entries will be dialled immediately after being searched for by voice.
- **“No Match Please Try Again”** is displayed if the unit could not find a matching voice tag.
- **“Timeout Please Try Again”** is displayed if you do not speak for 10 seconds.
- If you cannot find the desired entry by voice, find the entry using another method, then re-record its voice tag.


Searching for entries with a voice tag

- 1 Press  (soft key), then press .
- 2 Select **“Voice Tag”**, then press **OK**.
- 3 Push the joystick up or down repeatedly to scroll through all entries which have a voice tag.

Editing/adding to handset phonebook entries


Phonebook entries can be edited after you have saved them. You can change the name, phone number, and category, as well as add a voice tag (page 17) or hot key registration (page 18).

Changing a name, phone number, category

- 1 Find the desired entry (page 15).
- 2 Press  (centre of joystick), then press **OK**.
- 3 Edit the name if necessary (16 characters max.; see page 49 for character entry), then press **OK**.
- 4 Edit the phone number if necessary (24 digits max.), then press **OK**.
- 5 Select the desired category, then press **OK** 2 times.
- 6 Press [**✕**].

Adding a voice tag

 
You can record voice tags for up to 20 handset phonebook entries and then find the entries by speaking the voice tag (voice search feature).

- 1 Find the desired entry (page 15), then press  (centre of joystick).
- 2 Select **"Voice Tag"**, then press **OK** 2 times.
- 3 When **"Voice Tag Record"** is displayed, say the name of the phonebook entry.
 - If key tones are turned on (page 24), speak after the beep.
 - Hold the handset about 20 cm away and speak clearly into the microphone.
 - Voice tags can be up to 2 seconds long.

- 4 When **"Voice Tag Please Repeat"** is displayed, repeat the voice tag.


- 5 Press [**✕**].

Note:


- Phonebook entries which have a voice tag are indicated by .
- **"Timeout Please Try Again"** is displayed if you do not speak for 10 seconds.
- **"Too Long Please Try Again"** is displayed if the voice tag you recorded was over 2 seconds long.
- **"Too Different Please Try Again"** is displayed if the 2nd voice tag is too different from the first or if background noise exists. Please record the voice tag in a quiet environment.
- **"Already Exists Please Try Again"** is displayed if the voice tag is too similar to another entry's voice tag.

Playing a voice tag

You can play back a voice tag for reference.

- 1 Find the desired entry (page 15), then press  (centre of joystick).
- 2 Select **"Voice Tag"**, then press **OK**.
- 3 Select **"Play"**, then press **OK**.
 - The voice tag is played back.
- 4 Press [**✕**].


Erasing a voice tag

- 1 Find the desired entry (page 15), then press  (centre of joystick).
- 2 Select **"Voice Tag"**, then press **OK**.
- 3 Select **"Delete"**, then press **OK**.
- 4 Select **"Yes"**, then press **OK**.
- 5 Press [**✕**].

Hot key (quick dial)

Registering an entry in the handset phonebook to a hot key


Dial keys **[1]** to **[9]** can each be used as a “hot key”, allowing you to dial a number from the phonebook by simply pressing a dial key.

- 1 Find the desired entry (page 15), then press  (centre of joystick).
- 2 Select “**Reg. to Hot Key**”, then press **OK**.
- 3 Push the joystick up or down to select the desired dial key number.
 - Dial keys which have been registered as a hot key already will have a ✓ next to them. You can overwrite previous hot keys if desired.
- 4 Press **OK** 2 times.
- 5 Press **[X]**.

Making a call using a hot key

- 1 Press and hold the desired hot key (**[1]** to **[9]**).
 - You can view other hot key registrations by pushing the joystick up or down.
- 2 Press **[hook]** or **[phone]**.


Erasing a hot key

- 1 Press and hold the desired hot key (**[1]** to **[9]**).
- 2 Press  (centre of joystick), then press **OK**.
- 3 Select “**Yes**”, then press **OK**.

Note:

- Only the hot key is erased. The corresponding phonebook entry is not erased.


Erasing an entry in the handset phonebook

- 1 Find the desired entry (page 15), then press  (centre of joystick).
- 2 Select “**Delete**”, then press **OK**.
- 3 Select “**Yes**”, then press **OK**.
- 4 Press **[X]**.



Chain dial


This feature allows you to dial phone numbers in the handset phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually.

1 KX-TC560:


While on a call, press  (centre of joystick).

KX-TC580:

While on a call, press  (centre of joystick), then press .

- 2 Push the joystick up or down repeatedly to select the desired entry.
 - To search by first character (index search), category, or to search entries which have a voice tag, press , select the desired search method, then press **OK**.
- 3 Press **OK** to dial the number.

Copying handset phonebook entries to the base unit phonebook (KX-TC580 only)

- 1 Press **[INT]**, then press  (centre of joystick).
- 2 Press **OK**.
- 3 Select the desired phonebook entry, then press **OK**.










Note:

- If you have another compatible Panasonic handset, you can copy phonebook entries between handsets (page 42).

Base unit phonebook (KX-TCD580 only)

The base unit phonebook allows you to make calls without having to dial manually. You can add 20 names and phone numbers to the base unit phonebook and search for phonebook entries by name. Additional handset users (page 41) can also make calls using the base unit phonebook. If you subscribe to Caller ID service, you can use the base unit's audible call feature (page 32).

Adding entries to the base unit phonebook

- 1 Press  (soft key), then .
- 2 Select "Base Phonebook", then press .
 - The display shows the number of available entries in the phonebook.
- 3 Enter the party's name (16 characters max.; see page 49 for character entry), then press .
- 4 Enter the party's phone number (24 digits max.), then press .
- 5 To record an audible call announcement, press , otherwise select "Skip Recording", press , then go to step 8.
 - Audible call (page 32) is useful for Caller ID subscribers only.
 - If "Memory Full" is displayed, erase any unnecessary answering system messages (page 36).
- 6 When "Recording" is displayed, speak into the microphone.
 - Maximum recording time is 1 minute.
- 7 Press  to end recording.
 - The recording is played back. Press  to return to step 5.

Telephone

8 Press **OK** to save the phonebook entry.

9 Press **[XO]**.

Note:

- “Error” is displayed if the recording is less than 1 second long. Repeat step 5.

To edit/correct a mistake

Use the joystick to place the cursor on the number or character you wish to erase, then press **[C]**. Place the cursor to the right of where you want to insert a number or character, then press the appropriate dial key.

Note:

- Press and hold **[C]** to erase all numbers or characters.

Finding and calling a base unit phonebook entry

Base unit phonebook entries can be searched for by first character (index search) or by scrolling through all phonebook entries.

Once you have found the desired entry, press **[↶]** or **[↷]** to dial the phone number.

Scrolling through all entries

- 1 Press **[BOOK]** (soft key), then press **[BOOK]** again.
- 2 Push the joystick up or down repeatedly until the desired entry is displayed.

Searching by first character (index search)

This method is useful when you are searching for an entry which does not start with a letter of the alphabet.

- 1 Press **[BOOK]** (soft key), then press **[BOOK]** again.
- 2 Press **[D]**.
- 3 Press the right soft key repeatedly to select the character entry mode that


contains the character you are searching for.

- 4 Press the dial key (**[0]** to **[9]**) which contains the character you are searching for.
 - Press the same dial key repeatedly to select the character you are searching for.
- 5 Press **OK**.
 - The first entry beginning with the character you selected is displayed. If there is no such entry, the next entry will be displayed.
- 6 Push the joystick up or down repeatedly to scroll through the phonebook if necessary.


Changing a name, phone number, audible call

- 1 Find the desired entry (page 20).
- 2 Press **[MENU]** (centre of joystick), then press **OK**.
- 3 Edit the name if necessary (16 characters max.; see page 49 for character entry), then press **OK**.
- 4 Edit the phone number if necessary (24 digits max.), then press **OK**.
- 5 Record, skip, or erase an audible call recording.
 - To record the audible call announcement, continue from step 5, “Adding entries to the base unit phonebook”, page 19.
 - To skip recording or erasing, select “Skip Recording” and press **OK**.
 - To erase the audible call announcement, select “Delete” and press **OK**.
- 6 Press **OK** to save the phonebook entry.
- 7 Press **[XO]**.

Playing back an audible call announcement

- 1** Find the desired entry (page 20).
- 2** Press  (centre of joystick), select **"Audible Call"**, then press **OK**.
 - The audible call announcement is played back.
- 3** Press **[X]**.

Erasing an entry from the base unit phonebook

- 1** Find the desired entry (page 20).
- 2** Press  (centre of joystick), select **"Delete"**, then press **OK**.
- 3** Select **"Yes"**, then press **OK**.
- 4** Press **[X]**.

Guide to handset settings

For your reference, a chart of all items which can be customised for the handset is printed below. Details of each item can be found on the corresponding pages.

- When customising the handset, the current item or setting is indicated by ►.

Handset settings menu	Sub-menu	Default setting	Page
Set Date/Time	—	—	page 11
Memo Alarm	Alarm 1	Off	page 23
	Alarm 2	Off	page 23
	Alarm 3	Off	page 23
Ringer Option	Ringer Volume	Maximum	page 23
	Vibration	Off	page 23
	EXT Ringer Type	Ringer 1	page 24
	INT Ringer Type	Ringer 1	page 24
	Paging Tone	Ringer 1	page 24
	Private Ring	Ringer 1 ^{*1}	page 24
Tone Option	Key Tone	On	page 24
Display Option	Standby Display	Handset Name	page 24
	Talk Display	Talk Time	page 24
	Select Language	English	page 25
	Private Colour	Green ^{*1}	page 25
	Category Name	Category (No.) ^{*1}	page 25
Call Option	Call Bar	Off	page 25
	Direct Call No.	—	page 25
	Direct On/Off	Off	page 26
Registration	Register H/set	—	page 41
Select Base	—	Auto	page 41
Other Option	Change H/S PIN	0000	page 26
	Change H/S Name	Handset (No.)	page 26
	Auto Talk	Off	page 26
	Auto Voice Dial	Off	page 26
	Reset Handset	—	page 27

^{*1} Each category (1-9) has its own setting.



 

Note:

- Up to 5 menu items can be displayed at a time. To select a menu item not shown on the current page, scroll up or down by pushing the joystick up or down, respectively.

Handset settings

Memo alarm

An alarm will sound for 3 minutes at the set time once or daily. 3 different alarms can be set. A text memo can also be displayed. Set the date and time beforehand (page 11).

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Memo Alarm", then press **OK**.
- 4 Push the joystick up or down repeatedly to select an alarm (1 to 3), then press **OK**.
 - Times and memos for previously set alarms will be displayed.
- 5 Select an alarm mode, then press **OK**.
 - "off": Turns the alarm off. Press **OK**, then press  to finish.
 - "Once": The alarm will sound once at the set time. Enter the desired day and month by selecting 2 digits for each.
 - "Daily": An alarm will sound daily at the set time.
- 6 Enter the desired hour and minute by selecting 2 digits for each.
- 7 Press **12/24** repeatedly to select "AM", "PM", or 24-hour time entry, then press **OK**.
- 8 Enter a text memo (32 characters max., page 49) and/or press **OK**.
- 9 Select the ringer that will sound at the set time, then press **OK** 2 times.
- 10 Press .




Note:

- To stop the alarm, press any dial key.
- When in talk or intercom mode, the alarm will not sound until the call has ended.
- The alarm will sound at the set time even when the ringer is turned off.

 
- If you select "Once", the setting will be changed to "off" after the alarm sounds.

Ringer options

Ringer volume

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Ringer Option", then press **OK**.
- 4 Select "Ringer Volume", then press **OK**.
- 5 Push the joystick up or down repeatedly to select the desired volume.
- 6 Press **OK**.
- 7 Press .

Note:

- When the ringer volume is set to off,  is displayed.
- When the ringer volume is set to off, the handset will ring at the lowest volume for intercom calls and when paged.




Vibration feature

If the vibration feature is turned on, the handset will vibrate whenever a call is received, the unit is paged, or when an alarm sounds.

"On": The handset will vibrate while ringing.

"Vib→Ring": The handset will vibrate 4 times, then ring.

"off": Turns this feature off.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Ringer Option", then press **OK**.
- 4 Select "Vibration", then press **OK**.
- 5 Select the desired setting, then press **OK**.
 -  is displayed while the vibration feature is turned on.

Useful Telephone Settings

6 Press [**✕**].

Note:

- The handset will not vibrate while on the charger.

Changing ringer types

You can change the ringer type used by the handset.

“EXT Ringer Type”: Selects the ringer for outside calls.

“INT Ringer Type”: Selects the ringer for intercom calls.

“Paging Tone”: Selects the ringer heard when the base unit pages the handset.

“Private Ring”: Allows you to set a different ringer for each private category (for Caller ID subscribers only).

- 1 Press [**⏏**] (centre of joystick).
- 2 Select [**👉**], then press **OK**.
- 3 Select **“Ringer Option”**, then press **OK**.
- 4 Select the desired item, then press **OK**.
 - The ringer sounds using the current ringer type.
- 5 Select the desired ringer type, then press **OK**.
- 6 Press [**✕**].

Note:

- If you select one of the melody ringer types, the ringer will continue to sound for several seconds if the caller hangs up before you answer. You may hear a dial tone or no one on the line when you answer a call.
- The preset melodies in this product are used with permission of M-ZoNE Co., Ltd.

Tone options

Turning key tones on/off

Key tones are tones heard when keys are pressed. Includes confirmation tones and error tones.

- 1 Press [**⏏**] (centre of joystick).
- 2 Select [**👉**], then press **OK**.
- 3 Select **“Tone Option”**, then press **OK** 2 times.
- 4 Select **“On”** or **“Off”**, then press **OK**.
- 5 Press [**✕**].

Display options

Selecting the standby mode display

“Base Number”: The current base unit number is displayed.

“Handset Name”: The name of the handset is displayed.

“off”: Only the current date and time are displayed.

- 1 Press [**⏏**] (centre of joystick).
- 2 Select [**👉**], then press **OK**.
- 3 Select **“Display Option”**, then press **OK** 2 times.
- 4 Select the desired setting, then press **OK**.
- 5 Press [**✕**].

Selecting the talk mode display

You can change what is shown on the display when you make a call.

“Talk Time”: The length of the current call will be displayed.

“Phone Number”: The phone number you dialled will be displayed.

- 1 Press [**⏏**] (centre of joystick).
- 2 Select [**👉**], then press **OK**.
- 3 Select **“Display Option”**, then press **OK**.

- 4 Select "Talk Display", then press **OK**.
- 5 Select the desired setting, then press **OK**.
- 6 Press [**⌂**].

Changing the display language

- 1 Press **[⏏]** (centre of joystick).
- 2 Select **[⏏]**, then press **OK**.
- 3 Select "Display Option", then press **OK**.
- 4 Select "Select Language", then press **OK**.
- 5 Select the desired language, then press **OK**.
- 6 Press [**⌂**].

Note:

- If you select a language you cannot read, press [**⌂**], **[⏏]**, push joystick down, press **OK**, push joystick down 4 times, press **OK**, push joystick down 2 times, press **OK**, select the desired language, then press **OK**.

Changing category private colours

You can select the ring indicator colour used when calls are received from parties assigned to a category in the handset phonebook. (Caller ID subscribers only)

- 1 Press **[⏏]** (centre of joystick).
- 2 Select **[⏏]**, then press **OK**.
- 3 Select "Display Option", then press **OK**.
- 4 Select "Private Colour", then press **OK**.
- 5 Select a category, then press **OK**.
- 6 Select a ring indicator colour, then press **OK**.
 - The ring indicator flashes using the selected colour as a reference.
- 7 Press [**⌂**].

Changing category names

You can change the names of categories ("Family", "Friends", etc.) used by the handset phonebook.

- 1 Press **[⏏]** (centre of joystick).
- 2 Select **[⏏]**, then press **OK**.
- 3 Select "Display Option", then press **OK**.
- 4 Select "Category Name", then press **OK**.
- 5 Select a category, then press **OK**.
- 6 Edit the name (10 characters max., page 49), then press **OK**.
- 7 Press [**⌂**].

Call options

Turning call bar on/off

This feature prohibits making outside calls. When call bar is turned on, only intercom calls and emergency calls can be made. To store emergency numbers, see page 29.

- 1 Press **[⏏]** (centre of joystick).
- 2 Select **[⏏]**, then press **OK**.
- 3 Select "Call Option", then press **OK** 2 times.
- 4 Enter "0000" (default handset PIN).
 - If you changed the PIN, enter it (page 26).
- 5 Select "On" or "Off", then press **OK**.
- 6 Press [**⌂**].

Note:


- When call bar is turned on, **⌂** is displayed.

Storing the direct call number


This feature prohibits making outside calls except to the phone number you store here. The number will be dialled automatically when [**⏏**] or [**⏏**] is pressed.

- 1 Press **[⏏]** (centre of joystick).



Useful Telephone Settings

- 2 Select , then press **OK**.
- 3 Select "Call Option", then press **OK**.
- 4 Select "Direct Call No.", then press **OK**.
- 5 Enter the phone number (24 digits max.), then press **OK** 2 times.
- 6 Turn this feature on or off by selecting "On" or "Off", then press **OK**.
- 7 Press [**✕** **0**].

Note:

- When direct call is turned on,  is displayed when in standby mode.

Turning direct call on/off

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Call Option", then press **OK**.
- 4 Select "Direct On/Off", then press **OK**.
- 5 Select "On" or "Off", then press **OK**.
- 6 Press [**✕** **0**].

Note:

- If there is no direct call number stored when you turn direct call on, you will be prompted to enter a phone number.



Other options

Changing the handset PIN (personal identification number)

For security, the handset PIN must be entered when changing certain settings. The default PIN is "0000".



Important:

- If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, consult your nearest Panasonic service centre.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Other Option", then press **OK**.
- 4 Select "Change H/S PIN", then press **OK**.
- 5 Enter the current 4-digit handset PIN.
- 6 Enter the new 4-digit handset PIN.
- 7 Enter the new 4-digit handset PIN again.
- 8 Press [**✕** **0**].



Changing the handset name

The handset can be given a customised name ("BOB", "KITCHEN", etc.), useful when you have multiple handsets.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Other Option", then press **OK**.
- 4 Select "Change H/S Name", then press **OK**.
- 5 Edit the name (10 characters max., page 49), then press **OK**.
- 6 Press [**✕** **0**].

Turning auto talk on/off




When this feature is turned on, you can answer calls simply by lifting the handset off the charger. You do not need to press any buttons.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Other Option", then press **OK**.
- 4 Select "Auto Talk", then press **OK**.
- 5 Select "On" or "Off", then press **OK**.
- 6 Press [**✕** **0**].




Turning auto voice dial on/off

When this feature is turned on, handset phonebook entries will be dialled immediately after being searched for by

voice using the voice search feature (page 16).

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “Other Option”, then press **OK**.
- 4 Select “Auto Voice Dial”, then press **OK**.
- 5 Select “On” or “Off”, then press **OK**.
- 6 Press [ 0].

Resetting the handset to its default settings

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “Other Option”, then press **OK**.
- 4 Select “Reset Handset”, then press **OK**.
- 5 Enter “0000” (default handset PIN).
 - If you changed the PIN, enter it (page 26).
- 6 Select “Yes”, then press **OK**.
- 7 Press [ 0].

Note:

- The following items will be deleted or reset to their default settings:
 - Settings listed on page 22
 - Redial list
 - Walkie-Talkie mode, group ID and group handset no. (page 44)
- The following items will be retained:
 - Phonebook entries
 - Voice tags
 - Date and time
 - Handset name
 - Category names

Guide to base unit settings

For your reference, a chart of all items which can be customised for the base unit is printed below. Details of each item can be found on the corresponding pages.

- When customising the base unit, the current setting is indicated by ►.



Base unit settings menu	Sub-menu	Sub-menu 2	Default setting	Page
Ringer Option	Ringer Volume		Medium	page 29
Call Option	Recall		Type 2	page 29
	Pause Time		Short	page 29
	Emergency Call		111, 911 and 999	page 29
	Set ARS	Set Area Code	—	page 30
	Call Restricted		—	page 30
Other Option	Change Base PIN		0000	page 30
	Reset Base		—	page 31

Note:

- Up to 5 menu items can be displayed at a time. To select a menu item not shown on the current page, scroll up or down by pushing the joystick up or down, respectively.

Base unit settings

Adjusting ringer volume

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (page 30).
- 4 Press **OK** 2 times.
- 5 Push the joystick up or down repeatedly to select the desired volume.
- 6 Press **OK**.
- 7 Press [**⌂**].

Call Options



Changing the recall mode

Change the recall mode, if necessary, depending on the requirements of your service provider or PBX.

"Type 1": 100 ms

"Type 2": 600 ms

"Type 3": 200 ms



- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (page 30).
- 4 Select "Call Option", then press **OK**.
- 5 Select "Recall", then press **OK**.
- 6 Select the desired setting, then press **OK**.
- 7 Press [**⌂**].

Setting pause length

Change the pause length, if necessary, depending on the requirements of your service provider or PBX.



"Short": 3 sec.

"Long": 5 sec.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (page 30).
- 4 Select "Call Option", then press **OK**.
- 5 Select "Pause Time", then press **OK**.
- 6 Select the desired setting, then press **OK**.
- 7 Press [**⌂**].

Storing/changing emergency numbers

These settings determine which phone numbers can be dialed while the call bar feature is on (page 25).

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (page 30).
- 4 Select "Call Option", then press **OK**.
- 5 Select "Emergency Call", then press **OK**.
- 6 Select a memory location, then press **OK**.
 - If the memory location already contains an emergency number, the number is displayed.
- 7 Enter/edit the number, then press **OK**.
- 8 Press [**⌂**].





Note:

- The default setting for emergency numbers are stored in the first 3 memory locations. It is recommended that you do not overwrite these numbers.

Selecting area codes to be deleted automatically

In some situations, phone numbers stored automatically in the Caller ID list (page 33) will include area codes. If you do not want to dial the area codes when making calls from the Caller ID list, you can store the area codes which you want the unit to delete automatically.

Example: You have stored the area code “123”. If you make a call from the Caller ID list to the phone number “123-456-7890”, the unit dials “456-7890”.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Enter “0000” (default base unit PIN).
 - If you changed the PIN, enter it (page 30).
- 4 Select “Call Option”, then press **OK**.
- 5 Select “Set ARS”, then press **OK**.
- 6 Select “Set Area Code”, then press **OK**.
- 7 Select an area code location (1-25), then press **OK**.
 - If the location already contains an area code, the code is displayed.
- 8 Enter an area code (5 digits max.), then press **OK**.
- 9 Press [ ].







Note:

- The use of this feature can prevent a National Call from being dialled. E.g., in the case of the South Island, the “03” will be omitted and will therefore prevent a National Call to other areas of the South Island.

Setting call restriction

You can restrict selected handsets from dialling certain numbers. You can assign up to 6 phone numbers to be restricted, and select which handsets will be restricted.

Storing area codes here will prevent the restricted handsets from dialling any phone number in that area code. If a restricted number is dialled, the call will not be connected and the restricted number will flash on the display.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Enter “0000” (default base unit PIN).
 - If you changed the PIN, enter it (page 30).
- 4 Select “Call Option”, then press **OK**.
- 5 Select “Call Restricted”, then press **OK**.
- 6 Set which handsets will be restricted by selecting the handset then pressing .
 - Restricted handsets have a ✓ next to them.
 - To turn call restriction off for a handset, select the restricted handset, then press .
- 7 Press **OK**.
- 8 Select a memory location, then press **OK**.
 - Previously stored phone numbers are displayed.
- 9 Enter the phone number or area code to be restricted (8 digits max.), then press **OK**.
 - To erase a restricted number, press [**C**].
- 10 Press [ ].





Other options

Changing the base unit PIN (personal identification number)




 
For security, the base unit PIN must be entered when changing certain settings. The default PIN is “0000”.

Important:

- If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, consult your nearest Panasonic service centre.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it.
- 4 Select "Other Option", then press **OK** 2 times.
- 5 Enter the new 4-digit base unit PIN.
- 6 Enter the new 4-digit base unit PIN again.
- 7 Press [ ].

Resetting the base unit to its default settings

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Enter "0000" (default base unit PIN).
 - If you changed the PIN, enter it (page 30).
- 4 Select "Other Option", then press **OK**.
- 5 Select "Reset Base", then press **OK**.
- 6 Select "Yes", then press **OK**.
- 7 Press [ ].

Note:

- The following items will be deleted or reset to their default settings:
 - Settings listed on page 28
 - Date and time
 - Caller ID list
- The following items will be retained:
 - Phonebook entries
 - Recordings (KX-TCD580 only), including your greeting message, caller

messages, voice memos, audible call announcements, and recorded conversations

Caller ID service

Important:

- This unit is Caller ID compatible. To use Caller ID features (such as displaying caller phone numbers), you must subscribe to Caller ID service. Consult your service provider for details.

For all local and national incoming calls, your display will show the area code (e.g. 09 for Auckland) or the cellular prefix (e.g. 0274 for Telecom Cellular) followed by the caller's telephone number. An Auckland caller's number will be displayed as 09XXXXXXX. The seven X's represent the seven digits of the caller's telephone number. A caller from a 6-digit Telecom Cellular number will be displayed as 0274XXXXXX. For incoming international calls, your display may only show "0000". For business users on a Centrex line, your display will show Centrex extension numbers in the shorter extension number format used within your company.

Using toll services from Telecom or another company

Your telephone company may charge you for a local call if the number dialled has the area code prefix included. If this is unacceptable, dial only the 7-digit local number. Do not dial the **[0]** prefix or the area code.

Caller ID features

When an outside call is received, the caller's phone number can be displayed.

- Phone numbers of the last 50 callers will be logged in the Caller ID list.
- While listening to a message recorded by the answering system, you can call back the caller without having to dial the phone number (KX-TCD580 only).
- When Caller ID information is received and it matches a phone number stored in the unit's phonebook:

- The stored name will be displayed and logged in the Caller ID list.
- The handset will use the ringer indicator colour and pattern assigned to the caller's category.
- The handset will announce the audible call recording you made (KX-TCD580 only).
- If the unit is connected to a PBX system, you may not receive the caller information.
- When the caller dialled from an area which does not provide Caller ID service, "Out of Area" will be displayed.
- When the caller requested not to send caller information, either no information or "Private Caller" will be displayed.

Missed calls

If a call is not answered, the unit treats the call as a missed call. → and the number of missed calls are shown on the display. This lets you know if you should view the Caller ID list to see who called while you were out.

Private category

Private categories can help you identify who is calling by using different ringer indicator colours and ringer types for different categories of callers.

You can assign entries in the handset phonebook to a category (page 15), change the category names ("Friends", "Family", etc., page 25), and search for phonebook entries by category (page 16). When a call is received from a caller assigned to a category, the ringer indicator colour (page 25) and ringer type (page 24) you select is used.

 
Audible call (KX-TCD580 only)

Audible call allows you to know who is calling without looking at the display. If you record an audible call announcement for a base unit phonebook entry (page 19), the audible call recording will be announced when you receive a call from that person.


Note:

- If the ringer volume is turned off, audible call announcements will not be heard.

Call minder






Call minder is an automatic answering service offered by your service provider. If you subscribe to this service, your service provider's call minder system can answer calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by the service provider, not your telephone. When you have new messages,  will be displayed on the handset. Please consult your service provider for detail of this service.

Note:

- If  still remains on the display even after you have listened to new messages, turn it off by pushing and holding the joystick left for 2 seconds.

Viewing the Caller ID list and calling back

 Phone numbers of the last 50 different callers will be logged in the Caller ID list. You can use this list to return missed calls.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
 - The most recent call is displayed.
- 3 Push the joystick down repeatedly to search from the most recent call, or up to search from the oldest call.
 - A  is displayed next to items which have already been viewed or answered, even if they were viewed or answered using another handset.
- 4 Press  or  to call back the displayed party.


 



Note:

- If you do not want to dial the area codes when making calls from the Caller ID list,

you can store the area codes which you want the unit to delete automatically (page 30).

 Editing a caller's phone number before calling back


 

The caller's telephone number, which is sent to your telephone from your local telephone exchange, includes "0" and an area code prefix. For local calls, "0" and the area code prefix can be omitted.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Push the joystick up or down repeatedly to display the desired entry, then press .
- 4 Select "Edit for Call", then press **OK**.
- 5 Use the joystick to move the cursor, then edit the number.
 - Place the cursor on the number you wish to erase, then press **[C]**.
 - Place the cursor to the right of where you want to insert a number, then press the appropriate dial key.
- 6 Press , , or **OK** to call.

Note:


 

- The edited phone number will not be saved in the Caller ID list.

Erasing caller information

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Push the joystick up or down repeatedly to display the desired entry, then press .
- 4 To erase the selected entry, select "Delete", then press **OK**. To erase all entries, select "Delete All", then press **OK**.
- 5 Select "Yes", then press **OK**.

6 Press [ ].

Storing caller information into the handset phonebook

- 1** Press  (centre of joystick).
- 2** Select , then press **OK**.
- 3** Push the joystick up or down repeatedly to display the desired entry, press , then press **OK**.
- 4** Continue from step 2, “Adding entries to the handset phonebook”, page 15.



Answering system

The KX-TCD580 base unit contains an answering system which can answer and record calls for you when you are unavailable to answer the phone. You can also record your own voice memos (page 36) and phone conversations (page 14). For details about memory capacity, see page 37.



Important:

- Only 1 handset can access the answering system (listen to messages, record a greeting message, etc.) at a time.
- When callers leave messages, the unit records the day and time of each message. Make sure the date and time have been set (page 11).

Turning the answering system on/off

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “Answer On” or “Answer Off”, then press **OK**.
- 4 Press **[F1]**.

Note:




- When the answering system is turned on,  is displayed next to the battery icon.
- When the answering system is turned off,  disappears. The unit will not answer calls.

Greeting message


When the unit answers a call, callers are greeted by a greeting message. You can record your own greeting message or use a prerecorded greeting message.

Recording a greeting message

You can record your own greeting message (2 minutes and 30 seconds max.).

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “Record”, then press **OK**.
- 4 Select “Record OGM”, then press **OK**.
 - Hold the handset about 20 cm away and speak clearly into the microphone.
- 5 Press  to stop recording.
 - The greeting message is played back.
- 6 Press **[F1]**.



Note:

- To erase the greeting message, press  during playback, select “Yes”, then press **OK**.
- “Error” is displayed if the greeting message is less than 1 second long.




Using a prerecorded greeting message

If you erase or do not record your own greeting message, the unit can play a prerecorded greeting message for callers and ask them to leave messages. If the message recording time (page 40) is set to “Greeting Only”, caller messages will not be recorded and the unit will play a different prerecorded greeting message asking callers to call again.

Playing back the greeting message

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “Play OGM”, then press **OK**.
- 4 Press **[F1]**.

Erasing the greeting message

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Delete Message", then press **OK**.
- 4 Select "Delete OGM", then press **OK**.
- 5 Select "Yes", then press **OK**.
- 6 Press .


Note:



- If you erase your own greeting message, the unit will play a prerecorded greeting message for callers.

Listening to messages


 
Messages are stored and played back chronologically, from oldest message to newest.

Listening to new/all messages

When you have messages,  is displayed next to the number of new messages.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Play New Msg." or "Play All Msg.", then press **OK**.



Note:

- To adjust the speaker volume during playback, push the joystick up or down repeatedly.
- While listening to messages, you can switch between the receiver and speaker by pressing  or .




Repeating, skipping, stopping, erasing a message during playback

- To repeat a message during playback, push the joystick left. If pushed within the

first 5 seconds of a message, the previous message will be played.

- To skip a message during playback, push the joystick right.
- To stop a message during playback, press  (soft key).
- To erase a message during playback, press , select "Yes", then press **OK**.

Erasing all messages


- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Delete Message", then press **OK**.
- 4 Select "Delete All", then press **OK**.
- 5 Select "Yes", then press **OK**.
- 6 Press .

Note:

- The greeting message is not erased.

Calling back (Caller ID subscribers only)

If Caller ID information was received for the call, you can call the caller back while listening to a message.


- 1 Press  (centre of joystick) during playback.
- 2 Select "Call Back", then press **OK**.



Note:

- To edit the number before calling back, select "Edit for Call", press **OK**, edit the number, then press **OK**.

Recording a voice memo

To leave a private message for yourself or someone else, you can record a voice memo. This memo can be played back later, either directly or remotely.

- 1 Press  (centre of joystick).

- 2 Select , then press **OK**.
- 3 Select “Record”, then press **OK**.
- 4 Select “Record Memo”, then press **OK**.
 - Hold the handset about 20 cm away and speak clearly into the microphone.
- 5 Press  to stop recording.
- 6 Press **[*][0]**.

Note:



- Voice memos are treated as new messages.

Memory capacity

The total recording capacity (including your greeting message, caller messages, voice memos, audible call announcements, and recorded conversations) is about 30 minutes. A maximum of 64 messages can be recorded.

- If message memory becomes full, “Full” is displayed. To record additional messages, you will need to erase unnecessary messages.
- Messages are retained even if a power failure occurs.

Using direct commands

You can operate the answering system by pressing dial keys, rather than navigating through the menus. To use the following commands, press  (centre of joystick), select , then press **OK**.

Key	Direct commands
[1]	Repeat message (during playback) ^{*1}
[2]	Skip message (during playback)

Key	Direct commands
[3]	Enter the “Setting TAM” menu
[4]	Play new messages
[5]	Play all messages
[6]	Play greeting message
[7][4]	Record memo message
[7][6]	Record greeting message
[8]	Turn answering system on
[9]	Stop (recording, playback)
[0]	Turn answering system off
[*][4]	Erase this message (during playback)
[*][5]	Erase all messages
[*][6]	Erase greeting message

^{*1} If pressed within the first 5 seconds of a message, the previous message will be played.

Remote operation



Using a touch tone phone, you can call your phone number from outside and access the unit to listen to messages or change answering system settings. The unit's voice guidance will prompt you to press certain dial keys to perform different operations.

Important:

- In order to operate the answering system remotely, you must first turn on remote operation by setting a remote access code. This code must be entered each time you operate the answering system remotely.

Turning remote operation on/off

A 3-digit remote access code must be entered when operating the answering system remotely. This code prevents unauthorised parties from listening to your messages remotely. After you store your remote access code, remote operation is possible.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select "Setting TAM", then press **OK** 2 times.
- 4 To turn on remote operation, enter a 3-digit remote access code.
 - To turn off remote operation, press **[*]**.
- 5 Press **OK**.
- 6 Press **[*0]**.

Using the answering system remotely

- 1 Dial your phone number from a touch tone phone.
 - If the number of rings is set to "Auto", (page 39), the number of rings you

hear will indicate whether or not you have new messages.

- 2 After the greeting message starts, enter your remote access code.
 - The unit will announce the number of new messages.
 - After 3 seconds, voice guidance starts.
- 3 Follow the voice guidance prompts as necessary.

Note:

- You can hang up at any time.
- You can ignore the voice guidance and control the unit using remote commands (page 39).

Voice guidance

During remote operation, the unit's voice guidance will prompt you to press **[1]** to perform a specific operation, or press **[2]** to listen to more available operations.

Operations are presented by voice guidance in the following order:

- Play back all messages
- Play back new messages
- Record a message
- Erase all messages
- Record your greeting message

Note:

- If less than 5 minutes of recording time is available, the unit will announce the remaining recording time after the last message is played back.
- If message memory is full, erase unnecessary messages.

Remote commands

You can press dial keys to access certain answering system functions without waiting for the voice guidance to prompt you.

Key	Remote command
[1]	Repeat message (during playback)* ¹
[2]	Skip message (during playback)
[4]	Play new messages
[5]	Play all messages
[6]	Play greeting message
[7]	Record greeting message
[9]	Stop (recording, playback)
[0]	Turn answering system off
[*][4]	Erase this message (during playback)
[*][5]	Erase all messages
[*][6]	Erase greeting message (during greeting message playback)
[*][#]	End remote operation (or hang up)

*1 If pushed within the first 5 seconds of a message, the previous message will be played.

Turning on the answering system remotely

If the answering system is off, you can turn it on remotely.

- 1 Dial your phone number from a touch tone phone.
- 2 Let the phone ring 15 times.
 - A long beep will be heard.
- 3 Enter your remote access code within 10 seconds of the long beep.
 - The greeting message is played back.

- You can hang up, or enter your remote access code again and begin remote operation (page 39).



Guide to answering system settings

If the base unit is reset to its default settings (page 31), the following answering system-related settings will be reset.

Answering system setting	Default setting	Page
Answering system on/off	Answer On	page 35
Remote access code	—	page 38
Number of rings	4	page 39
Caller's recording time	No Limit	page 40
Greeting monitor	On	page 40

Changing the number of rings

You can change the number of times the phone rings before the unit answers calls. **"Auto"**: The unit answers after 2 or 3 rings when new messages have been recorded, and after 5 or 6 rings when there are no new messages. If you call your phone from outside to listen to new messages (page 38), you will know that there are no messages when the phone rings for the 4th time. You can then hang up without being charged for the call.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Push the joystick up or down repeatedly to select **"Setting TAM"**, then press **OK**.
- 4 Select **"Number of Rings"**, then press **OK**.

- 5 Select the desired setting, then press **OK**.
- 6 Press [**⏏**].

Selecting the caller's recording time

You can change the maximum message recording time allotted to each caller, or set the unit to greet callers but not record messages.

"1 Minute": Caller messages are limited to 1 minute.

"No Limit": Caller messages are limited only by the amount of total recording time available in the answering system.

"Greeting Only": The unit plays the greeting message but does not record caller messages.

- 1 Press **[⏏]** (centre of joystick).
- 2 Select **[⏏]**, then press **OK**.
- 3 Select **"Setting TAM"**, then press **OK**.
- 4 Select **"Msg Rec Time"**, then press **OK**.
- 5 Select the desired setting, then press **OK**.
- 6 Press [**⏏**].

Turning the greeting monitor on/off

You can select whether the greeting message is heard through the unit's speaker when the unit answers a call.

- 1 Press **[⏏]** (centre of joystick).
- 2 Select **[⏏]**, then press **OK**.
- 3 Select **"Setting TAM"**, then press **OK**.
- 4 Select **"Greet Monitor"**, then press **OK**.
- 5 Select **"on"** or **"off"**, then press **OK**.
- 6 Press [**⏏**].

Note:

- If set to **"off"**, only the caller message will be heard through the speaker.

Operating additional units

Additional handsets

Up to 6 handsets can be registered to a single base unit. Additional handsets will give you the freedom to, for example, have an intercom call with another handset while a third handset is on an outside call. See page 4 for information on ordering additional handsets.

Additional base units



Handsets can be registered to up to 4 base units, allowing you to add additional base units and extend the area in which your handset(s) can be used. If a handset moves out of range of its base unit when “Auto” is selected on base unit selection (page 41), it will look for another base unit to make or receive calls. A base unit and the handsets it communicates with is called a “radio cell”.

 


Note:

- Calls will be disconnected when the handset moves from one radio cell to another.
- Intercom calls and call transfers are only possible between handsets in the same radio cell.


Registering a handset to a base unit

You can register a handset to a base unit using the following method.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “Registration”, then press **OK** 2 times.
- 4 Select a base number, then press **OK**.
 - This number is used by the handset as a reference only.



- 5 Press and hold  on the top of the base unit for about 5 seconds, until the registration tone sounds.
 - If all registered handsets start ringing, press  to stop, then repeat this step.
 - After pressing , the rest of this procedure must be completed within 1 minute.
- 6 Wait until “Enter Base PIN” is displayed, then enter “0000” (default base unit PIN), then press **OK**.
 - If you changed the PIN, enter it (page 30).

Note:

- When the handset has been registered successfully,  will stop flashing. If key tones are turned on (page 24), a confirmation tone will be heard.

Selecting a base unit

When “Auto” is selected, the handset will automatically use any available base unit it is registered to. When a specific base unit is selected, the handset will make and receive calls using that base unit only. If the handset is out of range of that base unit, no calls can be made.




- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “Select Base”, then press **OK**.
- 4 Select the desired base unit number, or “Auto”, then press **OK**.
 - The handset starts searching for the base unit.

Cancelling a handset

A maximum of 6 handsets can be registered to a base unit. A handset can cancel its own registration (or the registration of another handset) that is stored in the base unit. This




Multi-unit Operation

will allow the base unit to “forget” the handset.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Enter “0000” (default base unit PIN).
 - If you changed the PIN, enter it (page 30).
- 4 Enter “226235”.
- 5 Select “Cancel Handset”, then press **OK**.
 - The names of all handsets registered to the base unit are displayed.
- 6 Select the handset(s) you want to cancel, press , then press **OK**.

Cancelling a base unit

A handset can be registered to a maximum of 4 base units. A handset can cancel a base unit that it is registered to. This allows the handset to “forget” the base unit.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “Registration”, then press **OK**.
- 4 Enter “226235”.
- 5 Select “Cancel Base”, then press **OK**.
- 6 Enter “0000” (default handset PIN).
 - If you changed the PIN, enter it (page 26).
- 7 Select the base unit(s) you want to cancel, press , then press **OK**.
- 8 Select “Yes”, then press **OK**.
- 9 Press **[F6]**.

Note:

- To register the handset to another base unit or to the same base unit again, see page 41.

Intercom between handsets

Example: When handset 1 calls handset 2

- 1 **Handset 1:**
Press **[INT]** and **[2]** (desired handset number).
- 2 **Handset 2:**
Press **[hook]** or **[hook]** to answer.
- 3 When finished talking, press **[F6]**.



Note:

- Intercom calls can be made between handsets in the same radio cell, but not between handsets in different radio cells.

Copying handset phonebook entries to other handsets

Phonebook entries (page 15) can be copied from the handset to the phonebook of a compatible Panasonic handset.


Example: When handset 1 is sending phonebook entries to handset 2

- 1 Establish an intercom call (page 42).
- 2 **Handset 2:**
Press  (centre of joystick), select “Recv Phonebook”, then press **OK**.
- 3 **Handset 1:**
Press , select “Send Phonebook”, then press **OK**.
- 4 **Handset 1:**
Push the joystick up or down repeatedly to select the desired entry and/or press **OK**.
- 5 **Handset 1:**
Select “Copy One Item” or “Copy All Items”, then press **OK**.

Note:

- If handset 2 (the receiver) did not prepare for copying, “**Copy Failure**” will be displayed on handset 1 (the sender).
- If phonebook memory is full on handset 2 (the receiver), “**Copy Incomplete**” will be displayed on handset 1 (the sender).

Note:

-  flashes to indicate the outside call is on hold.
- If the other handset user does not answer the call within 1 minute, the call will ring at your handset again.

Transferring calls between handsets, conference calls

Outside calls can be transferred between 2 handsets in the same radio cell. 2 handsets in the same radio cell can have a conference call with an outside party.

Example: When handset 1 transfers a call to handset 2

1 Handset 1:

During an outside call, press **[INT]** and **[2]** (desired handset number).

- The outside call will be put on hold.
- If there is no answer, press **[INT]** to return to the outside call.

2 Handset 2:

Press **[📞]** or **[📞]** to answer the page.

- Handset 2 can talk with handset 1.

3 Handset 1:

To complete the call transfer, press **[📞]**.

To establish a conference call, press **[3]**.

Transferring a call without speaking to the other handset user

1 During an outside call, press **[INT]**, then press the desired handset number.

- The other handset rings if it is within range of the base unit and turned on.

2 Press **[📞]**.

- The outside call rings at the other handset.

Walkie-Talkie

This feature allows compatible handsets to communicate with each other directly when they are in range of the same base unit (common mode, group mode) and even when outside the range of the base unit (group mode only).

Important:



- The maximum distance possible between 2 cordless handsets using Walkie-Talkie is 50 metres indoors and 300 metres outdoors. Actual performance will vary depending on usage conditions.
- When using Walkie-Talkie, talk time is about 14 hours; standby time is about 14 hours. To improve battery performance, turn off the handsets when not talking.
- Outside calls cannot be received while in Walkie-Talkie mode.

Changing the Walkie-Talkie mode

To ensure privacy, there are two Walkie-Talkie modes, common and group. Common mode allows Walkie-Talkie conversations between handsets registered to, and within range of, the same base unit. Group mode allows Walkie-Talkie conversations between handsets set to the same 3-digit group ID. The default setting is group.

Note:

- When in common mode, handsets set to “Auto” base unit selection (page 41) cannot have Walkie-Talkie conversations. Either select a base unit number, or change the Walkie-Talkie mode to “Group”.

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “Setting”, then press **OK**.
- 4 Select the desired mode, then press **OK**.



- If “Common” is selected, the setting is saved and the following steps can be skipped.

- 5 If “Group” is selected, next enter a 3-digit group ID, then press **OK**.
- 6 Assign a handset number (1-9) to be used during Walkie-Talkie conversations, then press **OK** 2 times.
 - This number is displayed by the handset only when using Walkie-Talkie. It does not affect other operations.

Note:

- To set the Walkie-Talkie mode to common mode, the handset must be within range of a base unit.


Turning Walkie-Talkie on

- 1 Press  (centre of joystick).
- 2 Select , then press **OK**.
- 3 Select “on”, then press **OK**.
 - The display changes to the Walkie-Talkie display, and the handset's Walkie-Talkie number is displayed.

Note:



- If a handset is outside the range of a base unit and the Walkie-Talkie mode is set to common mode, Walkie-Talkie cannot be turned on.
- This feature is turned off when the handset is turned off.


 

Turning Walkie-Talkie off

Press , select “off”, then press **OK**.

Starting Walkie-Talkie conversations

Both your handset and the handset you want to have a Walkie-Talkie conversation with must turn Walkie-Talkie on beforehand.


- 1 Press , , or **[INT]**, then the other handset's handset number.

- The other handset will ring if it is within range.
- 2** The other handset user can answer the call by pressing [, [, [INT], or any dial key.
 - 3** When finished talking, press [].

Using the belt clip

You can hang the handset on your belt or pocket using the belt clip.

Attaching the belt clip

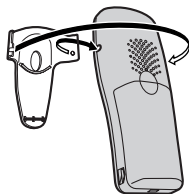

Removing the belt clip




Using an optional headset

Plugging an optional headset into the handset allows hands-free phone conversations.

The speakerphone is not available while a headset is plugged into the handset. To switch to speakerphone, disconnect the headset.

Connecting an optional headset

Open the headset socket cover and plug the optional headset into the headset socket as shown.

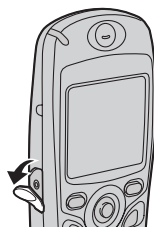



Note:

- Insert the connector plug into the headset socket firmly.


Wall mounting

Wall mounting the base unit

- 1 Remove the stand as shown.

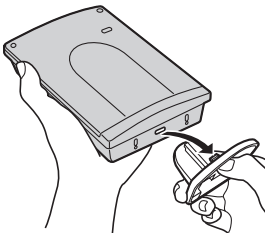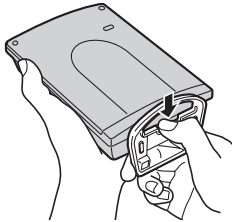

- 2 Connect the AC adaptor. Drive the screws into the wall using the wall template as a guide, then mount the base unit securely on the screws.

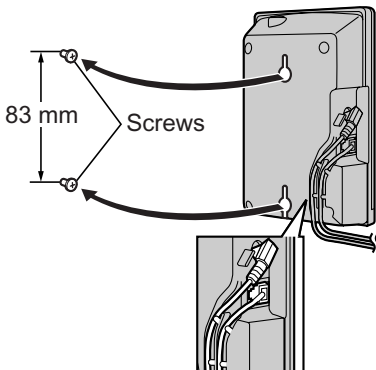**Note:**


- Make sure the screws are securely fastened to the wall.

Wall template for base unit




Wall mounting the charger

- 1 Connect the AC adaptor.

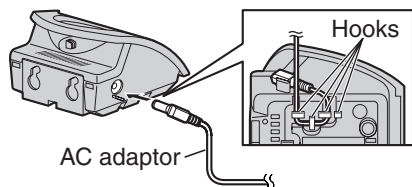


- 2 Drive the screws into the wall using the wall template as a guide, then mount the charger securely on the screws.

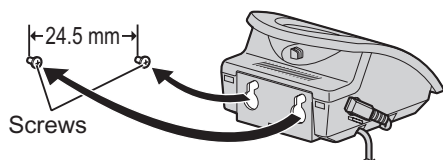

Note:

- Make sure the screws are securely fastened to the wall.

Wall template for charger

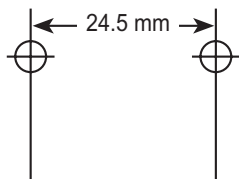

Character entry

The dial keys are used to enter characters and numbers. Each dial key has multiple characters assigned to it. When in **ABC**, **ABГ**, **AAA**, **SSS**, or **AБB** character entry modes, you can select which character is entered by pressing a dial key repeatedly.

- Move the joystick to move the cursor.
- Press dial keys to enter characters and numbers.
- Press **[C]** to erase the character or number highlighted by the cursor. Press and hold **[C]** to erase all characters or numbers.
- Press **[*]** to switch between uppercase and lowercase.
- To enter another character located on the same dial key, push the joystick right to move the cursor to the next space, then press the appropriate dial key.

Character entry modes

Several character entry modes are available by pressing the right soft key.

ABC Alphabet character table

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' () * , - . / 1	A B C 2 a b c 2	D E F 3 d e f 3	G H I 4 g h i 4	J K L 5 j k l 5	M N O 6 m n o 6	P Q R S 7 p q r s 7	T U V 8 t u v 8	W X Y Z 9 w x y z 9

0-9 Numeric entry table

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
0	1	2	3	4	5	6	7	8	9

ABГ Greek character table

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' () * , - . / 1	A B Г 2	Δ E Z 3	H Θ I 4	K Λ M 5	N Ξ O 6	Π P Σ 7	T Υ Φ 8	X Ψ Ω Ξ 9

Useful Information

Extended 1 character table

0	1	ABC2	DEF3	GHI4	JKL5	MNO6	PQRS7	TUV8	WXYZ9
Space 0	Space # & ' () * , - . / 1	A À Á Â Ã Ä Å Æ B C Ç 2	D È É Ê Ë Ì Í Î Ï 3	G Ğ H I Ì Í Î Ï 4	J K L 5	M N Ñ O Ò Ó Ô Õ Ö ø 6	P Q R S Ş ß 7	T U Û Ü Ü V 8	W Ŵ X Y ŷ Z 9
		a á â ã ä å æ b c ç 2	d e è é ê ë ë f 3	g ğ h i ì í î ï 4	j k l 5	m n ñ o ò ó ô õ ö ø 6	p q r s ş ß 7	t u ù ú û ü ü v 8	w ŵ x y ŷ z 9

- The following are used for both uppercase and lowercase:

ø Ş Ŵ ŷ

Extended 2 character table

0	1	ABC2	DEF3	GHI4	JKL5	MNO6	PQRS7	TUV8	WXYZ9
Space 0	Space # & ' () * , - . / 1	A Á Â Å B C Ć Č 2	D Ď E É Ě ě F 3	G H I Í 4	J K L Ł Ł Ł 5	M N Ń Ō Ó Ö Ő 6	P Q R Ŕ Ř Š Š Š 7	T Ť U Ú Ü Ů ů V 8	W X Y ŷ Ý Z Ž ž Ž 9
		a á â Å b c Ć Č 2	d ě e é Ě ě f 3	g h i í 4	j k l ł Ł Ł 5	m n Ń ň o ó ö ő 6	p q r Ŕ ř s š š 7	t ť u ú ű ů ů v 8	w x y ŷ ý z ž ž ž 9

- The following are used for both uppercase and lowercase:

Ą Ć Č Ę Ł Ł Ł Ń Ŕ Š Š ů ŷ Ž Ž Ž

Cyrillic character table

0	1	ABC2	DEF3	GHI4	JKL5	MNO6	PQRS7	TUV8	WXYZ9
Space 0	Space # & ' () * , - . / 1	A Б В Г 2	Д Е Ж З 3	И Й К Л 4	М Н О П 5	Р С Т У 6	Ф Х Ц Ч 7	Ш Щ Ъ Ы 8	Ь Э Ю Я 9

Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the AC adaptors and turn off the handset, then reconnect the AC adaptors and turn on the handset.

Telephone

📞 is flashing.

- The handset is not registered to the base unit. Register it (page 41).
- The handset is too far from the base unit. Move closer.
- The base unit AC adaptor is not connected. Check the connections.

I cannot make or receive calls.

- The base unit AC adaptor or telephone line cord is not connected. Check the connections.
- If you are using a splitter to connect the unit, remove the splitter and connect the unit to the wall socket directly. If the unit operates properly, check the splitter.
- Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider.
- The call bar feature is turned on. Turn it off (page 25).
- You dialled a call restricted number (page 30).
- The key lock feature is on. Turn it off (page 13).

The unit does not ring.

- The ringer volume is turned off. Adjust the handset ringer volume (page 23) and the base unit ringer volume (page 29).

The handset does not vibrate for incoming calls.

- The vibration feature is turned off. Turn it on (page 23).

The handset display is blank.

- The handset is not turned on. Turn the power on (page 11).

The handset will not turn on.

- Make sure that the battery is installed correctly (page 9).
- Fully charge the battery (page 9).
- Clean the charge contacts and charge again (page 9).

The battery should be charging but the battery icon does not change.

- Clean the charge contacts and charge again (page 9).
- The charger AC adaptor is disconnected. Plug in the AC adaptor.

A busy tone is heard when [📞] is pressed.

- The handset is too far from the base unit. Move closer and try again.
- Another handset is on an outside call. Wait for the other user to complete the call.

Static, sound cuts in/out, fades. Interference from other electrical units.

- Locate the handset and the base unit away from other electrical appliances.
- Move closer to the base unit.

The speaker cuts in/out while listening to recorded announcements with the speakerphone.


- Use the speakerphone in a quiet environment, or turn the mute on while listening to recorded announcements with the speakerphone.

Useful Information

The handset stops working while being used.

- Disconnect the base unit AC adaptor and turn off the handset. Connect the AC adaptor, turn on the handset and try again.

While storing an entry in the phonebook or assigning a hot key, the handset starts to ring.

- A call is being received. To answer the call, press . Programming will be cancelled. Start again.

Pressing does not display/dial the last number dialled.

- If the redialled number was more than 24 digits long, the number will not be redialled. Redial the number manually.

The handset beeps intermittently and/or flashes.

- Fully charge the battery (page 9).

I fully charged the battery, but still flashes.

- Clean the charge contacts and charge again (page 9).
- It is time to replace the battery (page 10).

Caller information is not displayed.

- You must subscribe to Caller ID service.

While viewing caller information, the display returns to standby mode.

- Do not pause for over 1 minute while searching.

Audible call sounds late. (KX-TCD580 only)

- The audible call announcement is too long. Record a shorter announcement (page 19).

When searching the handset phonebook by voice, the wrong entry is displayed.

- The voice tag is too similar to another voice tag. Record a different voice tag for one of the entries (page 17).

I cannot register a handset to a base unit.

- The maximum number of base units (4) are already registered to the handset. Cancel unused base unit registrations from the handset (page 42).
- The maximum number of handsets (6) are already registered to the base unit. Cancel unused handset registrations from the base unit (page 41).
- You entered the wrong PIN number. If you forget your PIN, consult your nearest Panasonic service centre.
- Locate the handset and the base unit away from other electrical appliances.

Answering system (KX-TCD580 only)

The answering system is turned on, but caller messages are not recorded.

- The recording time is set to “Greeting only”. Select “1 Minute” or “No Limit” (page 40).
- Message memory is full. Erase unnecessary messages (page 36).

I cannot operate the answering system with the handset.

- Another handset user is using the answering system, accessing the Caller ID list or changing base unit settings. Wait for the other user to finish.
- A caller is leaving a message. Wait for the caller to finish.
- The handset is too far from the base unit. Move closer.

I cannot operate the answering system remotely.

- You are entering the wrong remote access code. Turn remote operation on using the handset and select a new code (page 38).
- You are pressing the dial keys too quickly. Press each key firmly.
- The answering system is turned off. Turn it on (page 35).
- You are using a pulse telephone. Try again using a touch tone phone.

While recording a greeting message or listening to messages, the unit rings and recording stops.

- A call is being received. Answer the call and try again later.

Technical information

Standard: DECT (Digital Enhanced Cordless Telecommunications), GAP (Generic Access Profile)

Number of channels: 120 Duplex Channels

Frequency range: 1.88 GHz to 1.9 GHz

Duplex procedure: TDMA (Time Division Multiple Access)

Channel spacing: 1728 kHz

Bit rate: 1152 kbit/s

Modulation: GFSK (Gaussian Frequency Shift Keying)

RF transmission power: Approx. 250 mW

Voice coding: ADPCM 32 kbit/s

Power source: 220–240 V, 50 Hz

Power consumption, Base unit: Approx. 12 W

Power consumption, Charger: Approx. 12 W

Operating conditions: 5 °C–40 °C, 20 %–80 % relative air humidity (dry)

Dimensions, Base unit: Approx. 144 mm × 102 mm × 37 mm

Dimensions, Charger: Approx. 78 mm × 78 mm × 59 mm

Dimensions, Handset: Approx. 120 mm × 45 mm × 22 mm

Mass (weight), Base unit: Approx. 220 g

Mass (weight), Charger: Approx. 110 g

Mass (weight), Handset: Approx. 110 g

Note:

- Specifications are subject to change.
- The illustrations used in these operating instructions may differ slightly from the actual product.

Index

- A** Additional base units: 41
 - Additional handsets: 41
 - Answering calls: 14
 - Answering system: 35
 - Listening to messages: 36
 - Remote operation: 38
 - Turning on/off: 35
 - Audible call: 19, 21, 32
 - Auto talk: 14, 26
 - Auto voice dial: 26
- B** Base unit
 - Guide to settings: 28
 - PIN: 30
 - Resetting: 31
 - Selecting: 41
 Base unit phonebook: 19
 - Editing: 20
 - Erasing: 21
 - Making calls: 20
 - Storing: 19
 Battery
 - Charge: 9
 - Installation: 9
 - Life: 10
 - Replacement: 10
 - Strength: 10
 Belt clip: 46
- C** Call bar: 25
 - Caller ID: 32
 - Call minder: 33
 - Call restriction: 30
 - Call transfer: 43
 - Call waiting: 13
 - Chain dial: 18
 - Character entry: 49
 - Conference calls: 43
 - Connections: 9
- D** Date and time: 11
 - Direct call: 25, 26
 - Display
 - Icons: 7
 - Language: 25
 - Standby mode: 24
 - Talk mode: 24
- E** Emergency call: 29
- H** Handset
 - Changing name: 26
 - Guide to settings: 22
 - Locator: 14
 - PIN: 26
 - Power on/off: 11
 - Registration: 41
 - Resetting: 27
 Handset phonebook: 15
 - Editing: 17
 - Erasing: 18
 - Making calls: 15
 - Storing: 15
 Headset (optional): 46
 - Hot key (quick dial): 18
- I** Intercom: 42
- K** Key lock: 13
 - Key tone: 24
- M** Making calls: 12
 - Memo alarm: 23
 - Missed calls: 32
 - Mute: 13
- P** Pause: 13
 - Pause length: 29
 Phonebook copy
 - Handset to base unit: 18
 - Handset to handset: 42
 Phonebooks
 - Base unit: 19
 - Handset: 15
 PIN
 - Base unit: 30
 - Handset: 26
 Power on/off (Handset): 11
 - Private category: 32
- R** Recall: 13, 29
 - Recording
 - Audible call: 20
 - Greeting message: 35
 - Telephone conversations: 14
 - Voice memo: 36
 - Voice tag: 17
 - Redialling: 12
 - Redial list: 12
 - Ringer type: 24

Index

- S** Speakerphone: 12
- T** Temporary ringer off: 14
- V** Vibration: 14, 23
 - Voice search: 16
 - Voice tag: 17
 - Volume
 - Receiver: 12
 - Ringer (Base unit): 29
 - Ringer (Handset): 23
 - Speakerphone: 12
- W** Walkie-Talkie: 44
 - Wall mounting: 47

For your future reference

Attach or keep original receipt to assist with any repair under warranty.

Serial No. (found on the back of the base unit)
Date of purchase
Name and address of dealer

Note:

- In the event of problems, you should contact your equipment supplier in the first instance.

Customer Support Centre Tel. No.: (09) 272 0178
--

Sales Department:

Panasonic New Zealand Ltd.
350 Te Irirangi Drive
East Tamaki
Private Bag 14911
Panmure
Auckland
NEW ZEALAND

Panasonic Communications Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

© 2004 Panasonic Communications Co., Ltd. All Rights Reserved.